

# Product data sheet

Rocker with lens and arrow symbols for KNX push-button 1-gang



## Reference number

LS 101 KO5P WWM

## 1-gang rocker with lens and arrow symbols

for JUNG HOME push-button 1-gang, battery-powered, ref.-no.: Art.-Nr.: BT LS CD 1001  
for KNX push-button 1-gang ref.-no.: LS CD 10711 ST, LS CD 10911 ST

**matt lacquered**

**Colour:**  
matt snow white

**Material:**  
duroplastic lacquered