

Product data sheet

Rocker with lens and arrow symbols for KNX push-button 2-gang



Reference number

CD 102 KO5P BR

2-gang rocker with lens and arrow symbols

for JUNG HOME push-button 2-gang, battery-powered, ref.-no.: Art.-Nr.: BT LS CD 1002
for KNX push-button 2-gang ref.-no.: LS CD 10721 ST, LS CD 10921 ST

Duroplastic (scratch-proof) glossy

Colour:
brown

Material:
duroplastic