

Product data sheet

1-gang rocker for switch and push-button



Reference number

LC 990 4320J

1-gang rocker

Les Couleurs® Le Corbusier

for switch ref.-no.: 501 U, 502 U, 503 U, 506 U, 507 U, 501-20 U, 506-20 U, 507-20 U

for push switch ref.-no.: 502 TU, 506 TU, 507 TU

for push-button ref.-no.: 531 U, 532 U, 533 U, 533-2 U

for multi push-button ref.-no.: 531-41 U

Delivery time: please inquire for exact date

For illuminated inserts use rocker with lens ref.-no.: ..KO...

Spare part:

holder plate ref.-no.: CD 90 HP

Duroplastic lacquered

Colour:

terre d'ombre brûlée 59

Material:

duroplastic lacquered